



# Lock Maintenance

Maintenance instructions for your lock barrels



Call us on: +44 (0)161 429 1580 Visit us at: [maplefleetservices.co.uk](https://www.maplefleetservices.co.uk)

# Security Lock User Guide

Operating & maintenance instructions for your lock barrels

## Key Operated Locks

This vehicle is fitted with key operated security locks. They work independently of the existing manufacturers central locking, and so have to be locked or unlocked manually each time they're used.

## Lock Maintenance

To ensure long life of the lock barrels, make sure you carry out the following routine maintenance. Use ONLY a silicone based lubricant for this lock barrel, using any other lubricant and/or cleaner will attract dirt into the lock barrel and may cause the lock to seize, it will also invalidate your warranty.

## Cleaning The Lock Barrel

Clean your lock barrel regularly, ideally once per month during the summer and once per week during the winter. If your vehicle is operated in unusual weather or is exposed to extreme environmental conditions, such as desert, snow, rain forest etc, please adjust the cleaning frequency to suit your conditions.

1. Shake the can and insert plastic tube into the key slot, press the spray button
2. Remove the plastic tube
3. Insert and withdraw the key several times, both ways up and operate the lock
4. Remove the key and wipe it clean using a soft cloth or tissue
5. Repeat the process until the lock is clean

You can order an approved cleaning fluid from Maple, the part number is MA10042.

## Replacement Keys

If you require additional or replacement keys, contact the Maple Sales department on +44(0)161 429 1580 and quote your unique key number below.

## Your Unique Key Number

