



Slamlock User Guide

Maintenance instructions for your Lock Barrels

Slamlock User Guide

Maintenance instructions for your Lock Barrels

Key Operated Slamlocks

This vehicle is fitted with key operated slamlocks to the load area doors. In operation, doors lock automatically when closed. Keep vehicle keys with you at all times.

In the event that you become locked inside the vehicle, use the OEM internal release handle as normal to exit the vehicle.

Lock Maintenance

To ensure long life of the lock barrels, make sure you carry out the following routine maintenance. Use ONLY a silicone based lubricant for this lock barrel, using any other lubricant and/or cleaner will attract dirt into the lock barrel and may cause the lock to seize, it will also invalidate your warranty.

Cleaning The Lock Barrel

Clean your lock barrel regularly, ideally once per month during the summer and once per week during the winter. If your vehicle is operated in unusual weather or is exposed to extreme environmental conditions, such as desert, snow, rain forest etc, please adjust the cleaning frequency to suit your conditions.

1. Shake the can and insert plastic tube into the key slot, press the spray button
2. Remove the plastic tube
3. Insert and withdraw the key several times, both ways up and operate the lock
4. Remove the key and wipe it clean using a soft cloth or tissue
5. Repeat the process until the lock is clean

You can order an approved cleaning fluid from Maple, the part number is MA10042.

Replacement Keys

You have been supplied with a 'Duplication Key Card,' ensure that you keep this card in a safe place. Your unique key number can be found on the front of the card in the bottom right hand corner. If you require additional or replacement keys, contact the Maple Sales department on +44(0)161 429 1580 and quote this number.



Call us on: (0)161 429 1580

Visit us at: www.maplefleetservices.co.uk