

HF Green BondLock

User Guide



Call us on: +44 (0)161 429 1580 Visit us at: maplefleetservices.co.uk



HF Green BondLock User Guide

This vehicle is fitted with BondLock to all doors of the load area compartment - Please refer to the following user guide for an overview of how the system operates.

Operating BondLock

1.

To unlock the load area doors, first release the central locking using the manufactureres remote control (if applicable), then present the RFID fob to the Maple antenna.



2.

BondLock will now release, all load doors will remain unlocked for approximately 7 seconds. Any door not opened during this time will automatically relock.



3.

Any load door that has been opened, will automatically relock upon door closure.



Operating the Internal Release

In the event the doors lock whilst you are inside the load area of the vehicle, BondLock features a manual override facility, that can be used to exit the vehicle.

To opearate the internale release, press and hold the button marked 'PUSH' located on top of the BondLock locking mechanism. With the button still depressed, operate the manufacturers internal locking handle, the door should open, allowing you to exit the load area.

