

Vehicle Security User Guide

Key Operated Shutter Door FreightLock



Call us on: +44 (0)161 429 1580 Visit us at: maplefleetservices.co.uk



Shutter Door FreightLock User Guide

This vehicle is fitted with Key Operated FreightLock - A high security shutter door lock from Maple.

Accessing the Load Area

1.

To release the internal shutter door lock, insert the key into the lock barrel, located on the near-side of the vehicle and turn it clockwise, the locking bolt will retract.

2.

You can now open the rear doors. **NB:** If the door is not opened within 15 seconds, the lock will re-engage.

Securing the Load Area

3.

Upon door closure the locks will automatically engage (slamlock) securing the rear load compartment.

