

EC4 FreightLock User Guide

Manual Locking & Sealing Mode using a Fob



Call us on: +44 (0)161 429 1580 Visit us at: maplefleetservices.co.uk


Manual Locking & Sealing Mode User Guide

The following user guide, details how to operate the security system in a manual locking & sealing mode with the use of a fob (Challenge Response compatible).

Securing the Load Area - With a Fob


1.

With the doors closed, press and hold the white 'action button,' until the locking prompt is displayed (the format is L#). Once the prompt is displayed, release the button and a cursor will appear (L _).

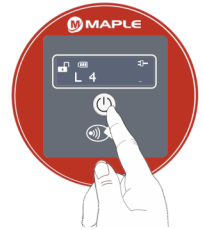


2.

With the cursor still displayed present a valid transponder to the antenna - The lock will engage and the message 'Sealed' will be displayed.

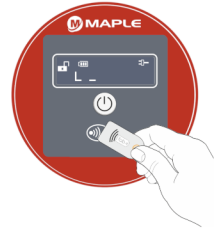

3.

To view the seal number, simply press the white 'action button.' at any time.

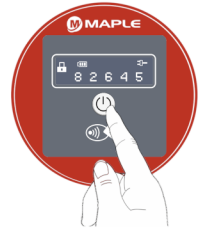

Accessing the Load Area - With a Fob

4.

Press the white 'action button' to wake-up the unit, revealing the current 5 digit seal numbers. With the seal number displayed, present a valid transponder to the antenna. The message 'unlocked' will be displayed and the locking bolt will retract, allowing the cargo doors to be opened.

