

# HFG FreightLock

## User Guide



Call us on: +44 (0)161 429 1580 Visit us at: [maplefleetservices.co.uk](http://maplefleetservices.co.uk)



## Load Area Security User Guide

This vehicle is fitted with FreightLock, a high security shutter door lock.

### Accessing the Load Area

1.

To release the rear door lock, present the fob to the antenna located on the near-side of the vehicle.



2.

You can now open the rear doors.

**NB:** if the door is not opened within 15 seconds the locks will re-engage.



### Securing the Load Area

3.

Upon door closure the locks will automatically engage.

