


User Guide

HF Green Tail-Lift Immobiliser

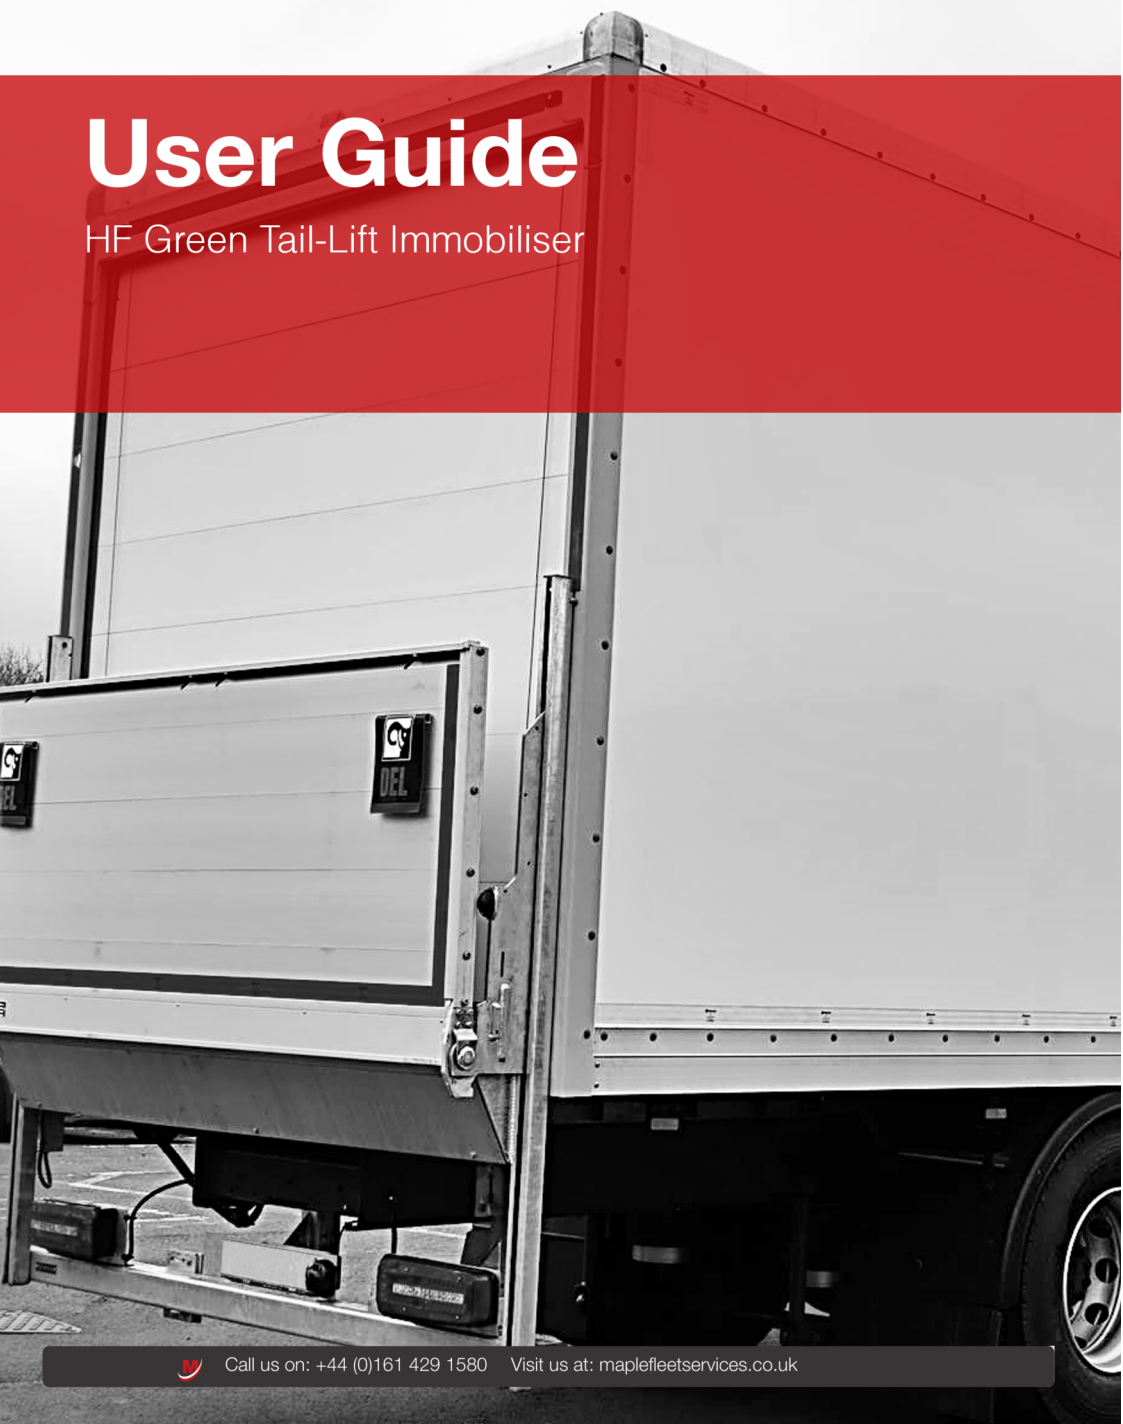

Call us on: +44 (0)161 429 1580 Visit us at: maplefleetservices.co.uk



HF Green Tail-Lift Immobiliser

This vehicle is fitted with a Tail-Lift Immobiliser from Maple Fleet Services. The system provides additional security whenever the tail lift is in the stowed position by preventing unauthorised use.



1.

Present a user fob to the Maple antenna, located on the nearside wall at the rear of the body - Hold the fob in position until the LED stops flashing.

2.

The tail-lift immobiliser will disarm for 30 seconds, allowing operation of the down control.

3.

The tail-lift immobiliser will automatically arm after 30 seconds (from point of disarming). If the tail-lift has not been fully lowered, show the transponder to the antenna once more.

4.

The tail-lift immobiliser can also be disarmed from inside the vehicle - simply present the transponder to the 'Maple' label on the inside wall.

NB: In the event that additional user fobs are required for the tail-lift immobiliser, please contact the Maple Sales Team on +44 (0)161 429 1580 or email sales@maplefleetservices.co.uk

