



IBC ActivLock


Operating instructions for your vehicle security system

MAPLE
Installation Team

Cab Area Security & Starting the Vehicle




1. To access the cab area, all load doors must be closed. The vehicle will remain immobilised if a load door is open or if the siren is sounding, indicated by a solid LED on the dash mounted iButton reader. An in-cab buzzer will sound if an attempt is made to start the vehicle whilst still immobilised.

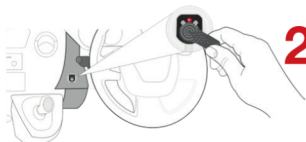


2. Show an iButton fob to the dash-mounted reader to disarm the immobiliser, the LED should stop flashing, you can now turn the ignition on. The vehicle will automatically immobilise once the ignition is switched off and the cab door is locked, indicated by a flashing LED.

Manual Immobilisation

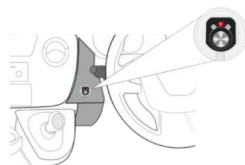


1. The vehicle can be manually immobilised by showing an iButton to the dash mounted reader, the LED will flash, once activated. Showing an iButton fob again will disarm the immobiliser.

Accessing the Load Area

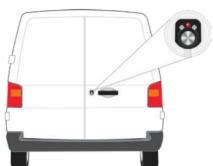

1. To unlock the load area doors, the ignition must be switched off and the cab doors locked. The iButton reader LED's, adjacent to each load area door will start flashing once the cab area is secured and the lock is enabled.

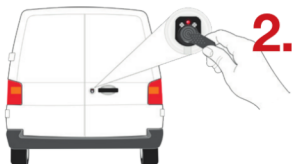

2. Show an iButton fob to the reader adjacent to the door you want to unlock, once the door is opened the LED will stay on constantly to indicate it is open. With one door open you cannot unlock another door, the LED's adjacent to the other doors will be off, indicating that the lock is disabled.



3. The load area doors will automatically lock 2 seconds after door closure, the vehicle alarm will also arm once all load doors are closed.

