



# IBC ActivLock


Operating instructions for your vehicle security system

MAPLE  
Installation team

## Accessing the Load Area


1.

To unlock the load area doors, the ignition must be switched off and the cab doors locked. The iButton reader LED's, adjacent to each load area door will start flashing once the cab area is secured and the lock is enabled.

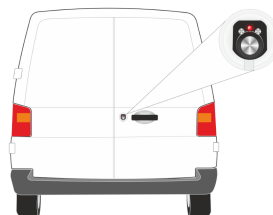

2.

Show an iButton fob to the reader adjacent to the door you want to unlock, once the door is opened the LED will stay on constantly to indicate it is open. With one door open you cannot unlock another door, the LED's adjacent to the other doors will be off, indicating that the lock is disabled.

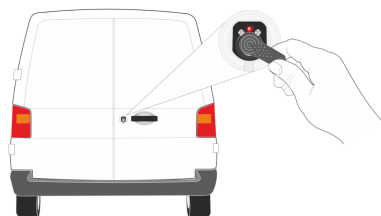

3.

The load area doors will automatically lock 2 seconds after door closure, the vehicle alarm will also arm once all load doors are closed.

