


# Manual Lock with Telematics Integration User Guide

The following user guide, details how to operate FreightLock with a manual locking configuration, in conjunction with a 3rd party telematics system.

## Securing the Load Area - With the Locking Code


1.

With the doors closed, press and hold the white 'action button,' until the locking number is displayed (the format is L#). Once the locking number is displayed, release the button and a cursor will appear.

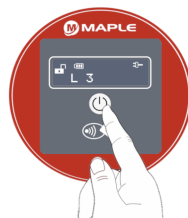


2.

With the cursor still displayed, press the 'action button' as many times as required to enter the single digit locking number (i.e. Press three times to enter the number 3).

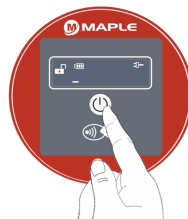


3.

With the correct number entered the unit will automatically lock and a new seal number will be generated.

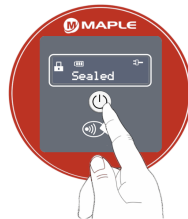

4.

To view the seal number, simply press the white 'action button,' at any time.

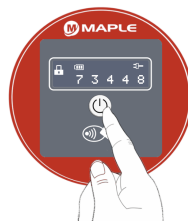

# Manual Lock with Telematics Integration User Guide

## Accessing the Load Area


1.
- To unlock the load area doors, you will require an access code. To obtain the access code contact your fleet administrator, who will retrieve the information from the telematics portal.



2.
- To enter the unlock code into the vehicle mounted control unit, press and hold the white 'action button,' until a cursor is displayed.



3.
- Press the white 'action button' as many times as required to enter the first digit (i.e. press three times to enter number 3, or five times for number 5).

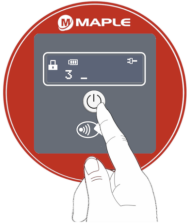

4.
- Wait until the cursor moves to the next digit and repeat stage 4 until all four digits have been entered. If a correct code is entered a confirmation message will be displayed and the unit will unlock.

