

FreightSeal User Guide

Automatic lock & manual sealing mode



Call us on: +44 (0)161 429 1580 Visit us at: maplefleetsservices.co.uk

FreightSeal User Guide Automatic Locking & Manual Sealing Mode




WARNING: Do not attempt to drive the vehicle with the FreightSeal handle stowed in the raised position - it must be secured in the closed position to prevent any damage.

Securing the Load Area

1.


Close the vehicle door and secure the door handle as normal. Thread the sealing cable through the door latch and place the eye of each end of the sealing cable onto the corresponding pin.

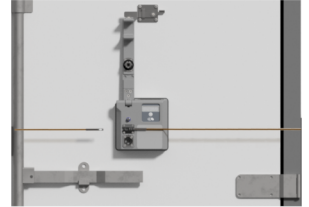

2.

Release the latch holding the FreightSeal handle, then lower into the closed position, ensuring that the locking mechanism has fully engaged – The system will automatically lock.

NB: If you need to unlock the unit before generating the seal number, ensure the **Unlock fob is used.**

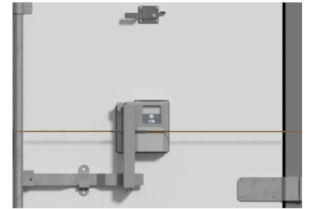


3.

To Seal the unit, press the white action button and present the **seal fob** to the antenna - the message **Sealed** will flash up on the display.

To view the seal number, press the white action button.

NB: If a seal number is not displayed, ensure that the locking mechanism has fully engaged and the FreightSeal handle cannot be raised.

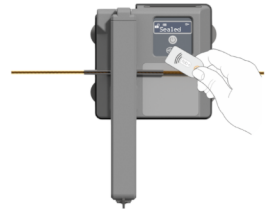

FreightSeal User Guide Automatic Locking & Manual Sealing Mode




WARNING: Do not attempt to drive the vehicle with the FreightSeal handle stowed in the raised position - it must be secured in the closed position to prevent any damage.

Accessing the Load Area


1.

On arrival at the vehicle's destination, press the white action button to confirm the seal number remains intact (and corresponds to vehicle manifest if applicable).

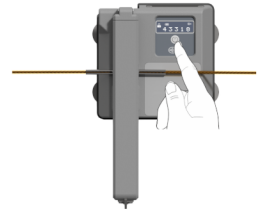

2.

To unlock FreightSeal, press the white action button and present a valid **unlock fob** to the antenna, the message **Unlocked** will flash up on the display.

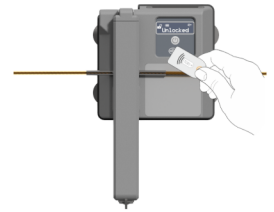

3.

Immediately raise the FreightSeal handle to the open position, securely latching it into position - then remove the sealing cable, enabling entry to the cargo area.

NB: If the FreightSeal handle is not raised to the open position within 5 seconds, the locking mechanism will re-engage.

