

Challenge Response User Guide



Call us on: +44 (0)161 429 1580 Visit us at: maplefleetservices.co.uk


Unlocking a Vehicle with Challenge Response User Guide

The following user guide, details how to use unlock codes utilising the 'Challenge Response' access control procedure.

Accessing the Load Area with PIN Codes

1. Press the white 'action button' on the vehicle mounted control unit to reveal the seal number, then contact your fleet administrator, quoting the seal number to request an access code.


If you are a registered user visit www.integritas-secure.net and login using your user credentials.

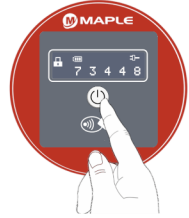


2. To obtain an access code, once logged into the web portal, click 'Access Code' from the homepage. Select the vehicle from the 'Units' list, enter the current seal number displayed on the vehicle mounted control unit, add any notes, then click 'Get Code.' Your unlock code will then be displayed.



3. To enter the unlock code into the vehicle mounted unit, press and hold the white 'action button,' until a cursor is displayed.

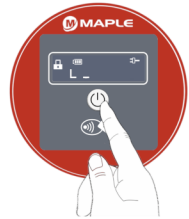

4. Press the white 'action button' as many times as required to enter the first digit (i.e. press three times to enter number 3, or five times for number 5).

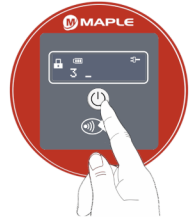

5. Wait until the cursor moves to the next position and repeat stage 4 until all five digits have been entered. If a correct code is entered, the message 'Unlocked' will be displayed.

The lock will now retract and you can open the shutter door. (NB: if you do not open the doors, the unit will re-lock after 15 seconds)

