

ActivLock Plus

Van Security User Guide



Call us on: +44 (0)161 429 1580 Visit us at: maplefleetservices.co.uk

ActivLock Plus

This vehicle is fitted with an electronic slamlock - Please refer to the following user guide for an overview of how the system works.



Unlocking Load Area Doors

1. Present the RFID fob to the antenna located by the door you wish to open. The LED will emit a constant light for 2–3 seconds, confirming the system has disarmed.

NB: Each door operates independently - only the door you present the fob to will unlock.

2. Once disarmed, the load area alarm will deactivate and the door will unlock. If the door is not opened within 7-8 seconds, the system will automatically rearm.

NB: For the rear doors, the non-leading door can only be opened once the vehicle's central locking has been disarmed using the manufacturer's remote unlock button.

Securing Load Area Doors

3. The security system will automatically rearm 2-3 seconds after door closure.

Silence Alarm

4. In the event that the load area alarm is triggered, present the RFID fob to any antenna to silence the siren. The alarm will cease sounding but the alarm will remain armed.

NB: The load area alarm identifies which door has triggered the siren. The corresponding door antenna LED will flash rapidly to provide a visual indication, whilst the siren is sounding.

Operating the Internal Release

In the event the doors lock whilst you are inside the load area of the vehicle, the system features an override facility, that can be used to exit the vehicle.

To operate the internal release, press and hold the red push button marked Press to Exit. With the button still depressed, operate the manufacturers internal locking handle to open the door.

